
instructions - search methods

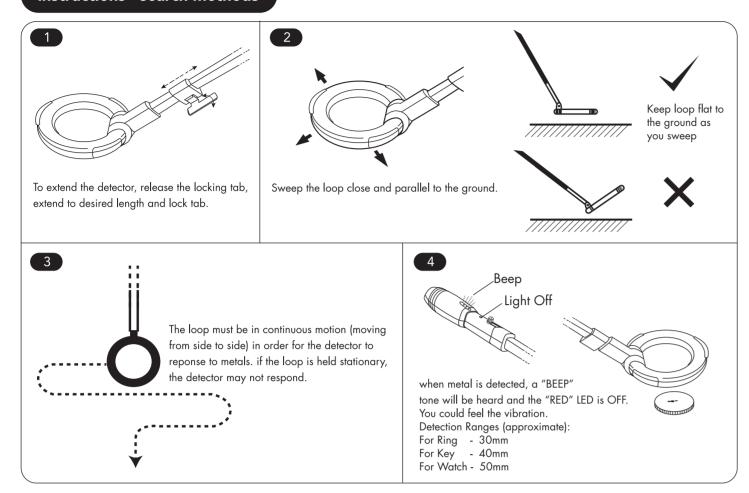


where to search

- Use your imagination, valuables can be found anywhere people have gathered, lived, walked and played.
- Obtain permission to search private property.

storage

- When the detector is not in use, make sure the control knob is turned to the "OFF" position.
- Remove the battery from is compartment if you plan on storing the detector for long.
- Store the detector indoors in a dry area.

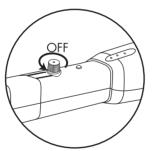

FE Managed item

early learning centre SS16	colours:	approval	date	signature
sku number : 142500		packaging manager		
product : Metal Detector		copywriter		
pack dimensions : A3 supplier : Nu Look IPI category : A&A		QA		
date: 03 Aug 2015 designer : Man	Black	product manager		

NOTE: The spot colour is not accurate (simulated using CMYK) in this digital proof, please refer to the Pantone specification (or our colour key).




metal detector

user guide

142500 1115 Early Learning Centre® Watford WD24 6SH England.

Customer Service Department 0371 231 3513


parts checklist

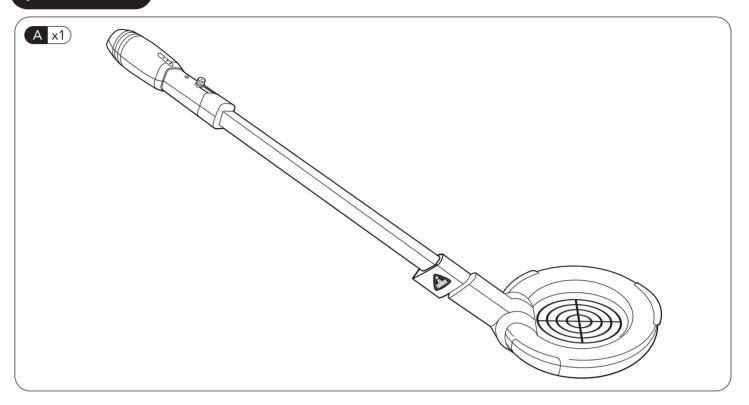


instructions - battery





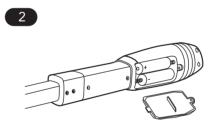


Install the battery noting carefully the correct (+) and (-) positions.

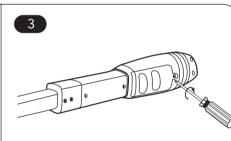


Close battery compartment in a clockwise direction.

before you start - sensitivity calibration

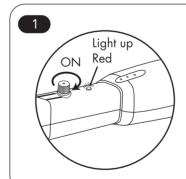

Turn the control knob clockwise towards "ON" direction, until long "BEEP" tone is heard and "RED" LED is OFF. You could feel the vibration at the same time.

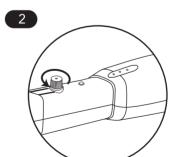

Then turn the knob anti-clockwise slowly until the "BEEP" tone is OFF and "RED" LED is "ON".

The sensitivity calibration is finished. You could start now.