

**USE:**

**WARNING!** Young children in play are unaware of potential dangers and hazards, therefore responsible adult supervision is essential.

For family domestic use only.

Maximum user weight 25kg.

Suitable for indoor or outdoor use.

Only one user.

Collision hazard.

Age 1 - 3.

Ensure your child always jumps in the middle of the mat.

Do not use the mat when it is wet.

Do not leave the trampoline in wet or windy conditions.

Trampoline only to be moved by an adult.

Use in an open flat level area. If outside, use on grassed area at least 2m away from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.


Do not use the use the trampoline on concrete, asphalt or any other hard surface. Do not use in the same proximity of other installations such as paddling pools, swings, slides or climbing frames.

Trampoline not designed to be anchored in any such way or buried into the ground.

If indoors, use away from furniture and other obstacles.



**Assembly****1 Assembly - A,B,C,D,E & F****Select Area.**

Lay the frame on the floor - refer to contents list.



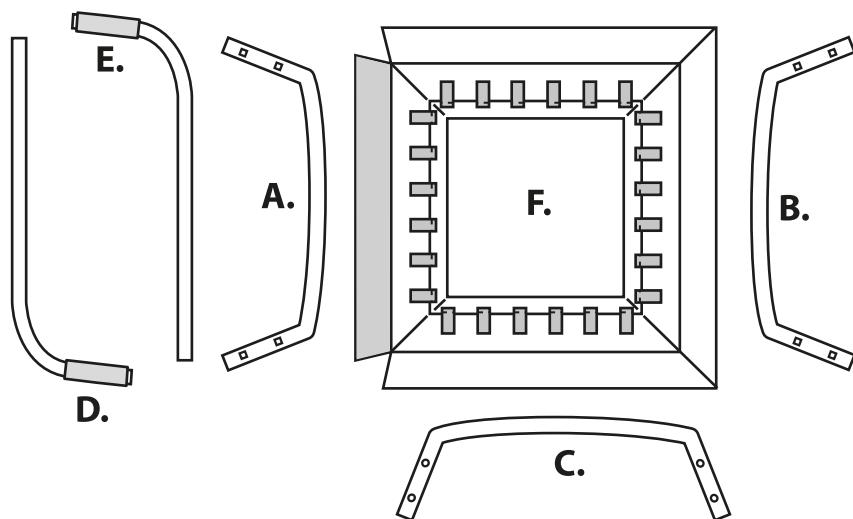
**2****Assembly - Parts: A,B,C x 2 & F**

Lay the bounce mat (F) on the floor. Insert frames legs (A,B & C x 2) into elastic loops.

**Ensure** frame leg (A) has been inserted through the opening on top of mat.

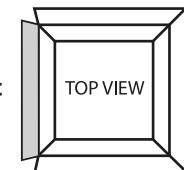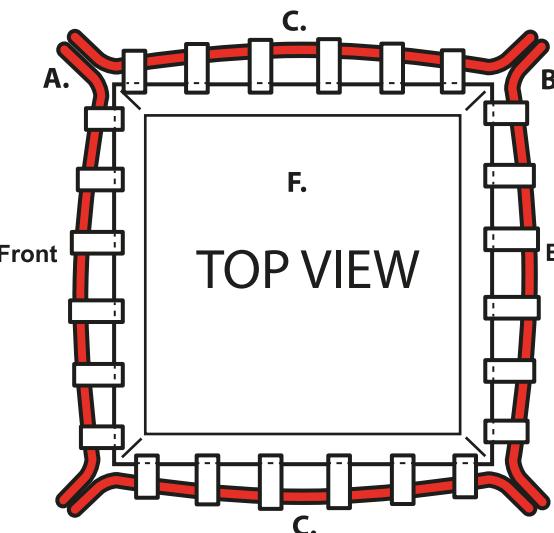
**3****Assembly - Parts: D & E**

Assemble the handles (D & E) by fixing the handle legs together to form an arch. Make sure the spring peg fits into the hole.

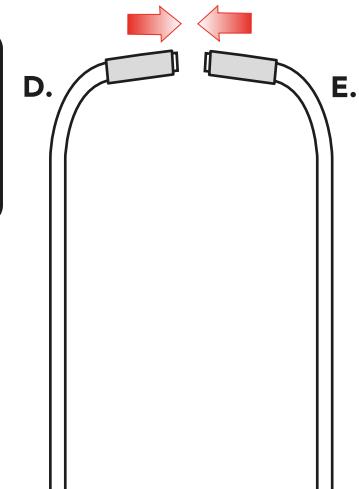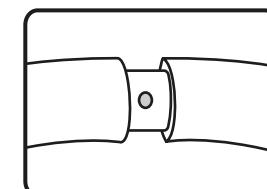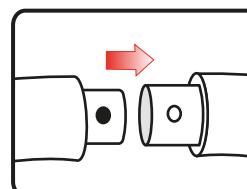


#### 4 Assembly - Parts: B, C & Bolts (H).

Insert bolt (H) through frame (B) and then through frame (C).  
Fasten frames together with the washer and dome nut from bolt (H).  
**LOOSELY FASTEN THE NUTS AT THIS STAGE.**

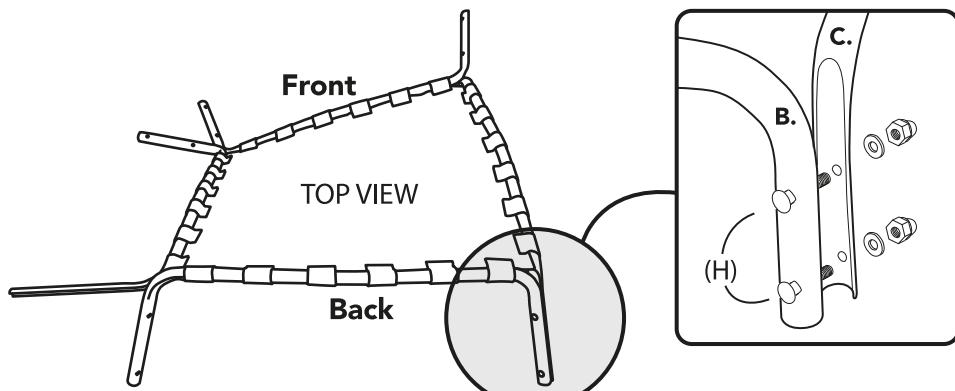

#### 5 Assembly - Parts: A, C, D, E & Bolts (H).

Insert bolt (H) through frame (A), pole (D) and then through frame (C).  
Fasten frames together with the washer and dome nut from bolt (H).  
Repeat this sequence for the opposite side (E) of the trampoline.  
**LOOSELY FASTEN THE NUTS AT THIS STAGE.**

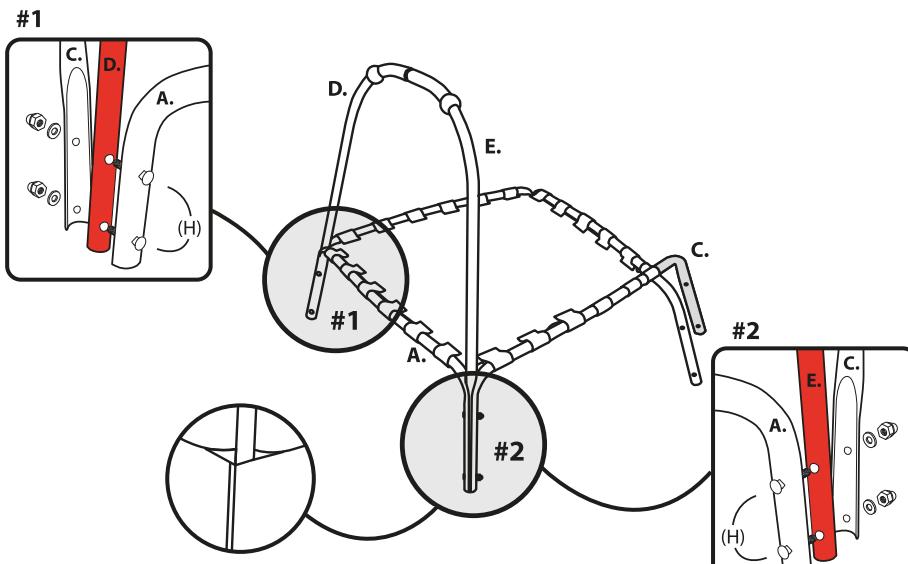

#### USE:

Do not eat or drink whilst jumping.  
Do not exit by a jump.  
Limit the time of continuous usage (make regular stops).  
Ensure children are not wearing loose clothing that could snag on the equipment, such as baggy pockets, hoods or jewellery.  
Empty pockets and hands before jumping.  
When indoors use without shoes / When outdoors use with shoes.  
Do not allow your child to attempt somersaults or stunts.  
No modifications should be carried out to this trampoline and no accessories should be added.  
Store indoors when not in use.

**CARE:** Check all fixings regularly, tighten if necessary, and check that the suspension system is secure.

Check that all spring-loaded (pit-pin) joints are still intact and cannot become dislodged during play

 
Check metal sections for signs of corrosion.

Check all coverings, padding and sharp edges for defects and replace when required.  
Discontinue use if weakening or breakage found. Contact our Customer Services Department in the event of a failure. Failure to comply with these precautions may result in injury.


#### contents

**PLEASE REMOVE ALL PACKAGING ATTACHMENTS BEFORE GIVING THIS PRODUCT TO YOUR CHILD.**


Frame leg A x 1




Frame leg B x 1

 

Frame leg C x 2

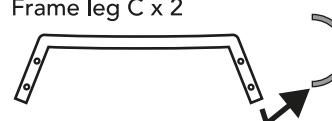


Handle frame D x 1

 

Handle frame E x 1


Mat F x 1

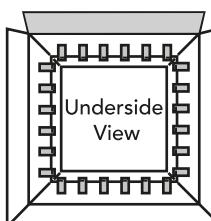


Foot Moulding G x 4



 Bolt Set H x 8



Spanner I x 1

 




**Assembly - Parts: G**

Slot foot moulding (G) x 4 onto each leg section.

Ensure each moulding has been positioned as per the diagrams shown on page.

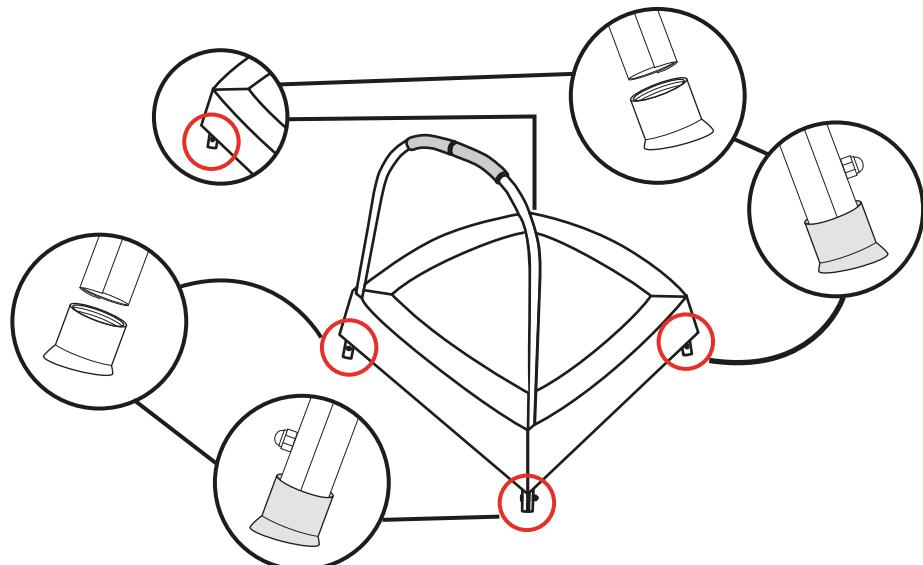**TROUBLE SHOOTING:**


Please tip the trampoline up on to one leg while holding the handle, this will make a diamond shape with the trampoline.

Push down firmly on the frame work 2 or 3 times then place the trampoline back on the floor.

If there is a still a wobble repeat on each leg, returning the trampoline back to the floor each time until the trampoline is flat.

If you are still having difficulty, you may need to loosen the bolts before trying to correct the wobble.

**Please re-check all nuts and re-tighten if necessary.**

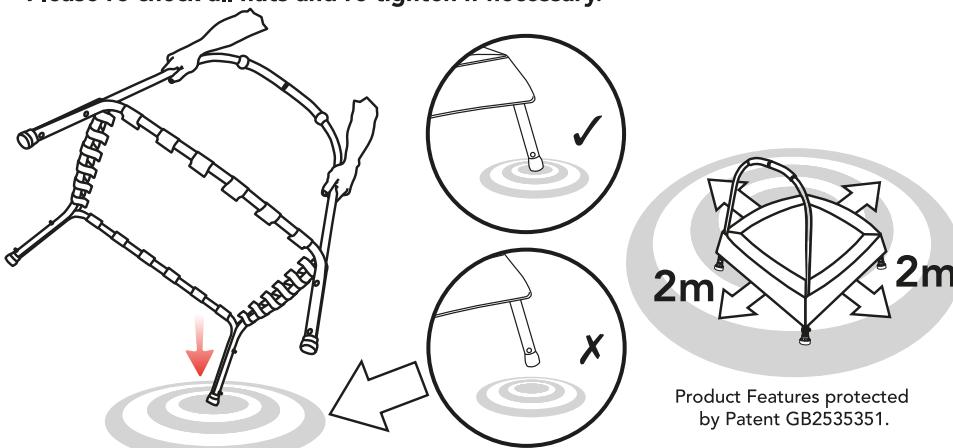

# Junior trampoline instructions




145427 / 145428

Early Learning Centre®  
Watford WD24 6SH England

**Customer Service Department**  
**0371 231 3513**

**PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

**PLEASE READ ALL INSTRUCTIONS AND WARNINGS BEFORE ASSEMBLY**

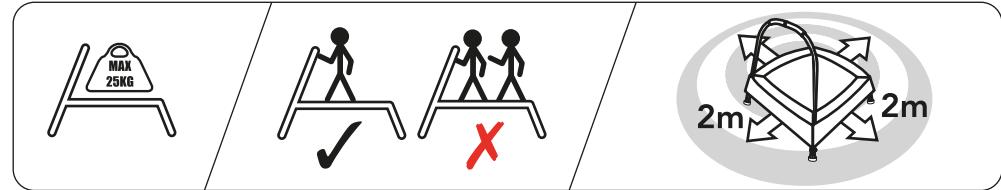**ASSEMBLY:**

**WARNING!** The trampoline shall be assembled by an adult in accordance with the assembly instructions and thereafter checked before first use.

Ensure bolts and small components are kept out of reach of young children.

Remove all packaging ties before giving to your child.

Make sure that the hook-and-loop fasteners are closed correctly during use of the trampoline.

**En WARNING** Adult supervision required. Remember babies and young children have no idea what is dangerous or potentially harmful, so supervision is important. CAUTION Adult assembly required. WARNING For domestic use only. Max weight 25 KGs. IMPORTANT! The putting up and taking down of this product should always be done by an adult. Always place on a cleared flat surface away from sharp objects and stones. IMPORTANT, Please read instructions fully before starting assembly. Use in an open, flat level area at least 2m away from obstacles & furniture. Check Product regularly for wear. Do not continue to use if any part of the steel frame becomes bent or broken. The nuts and bolts should be checked for tightness at the beginning of each season and at regular intervals. If such checks are not carried out the toy could overturn and cause a fall. WARNING. For family domestic use only. Suitable for indoor or outdoor use. Only one user. Collision hazard. Remove all packaging before giving to your child. The item inside this packaging may vary slightly from the photography. Colour and Specification may vary. Please retain this information for future reference. 1-3 years, Made in China.

**Ar تحذير** برجاً اخراج الأطفال الصغار و المرضعه لا يفرون ما هر خطأ او مضر لهم، ولذا من الضروري مراعتهم. يرجى دائمًا تجنب اللعب على سطح مفتوح على الأقل عن العقبات والأشياء الأخرى. ملحوظة مسافة على الأقل 2 متر على المساحة المفتوحة والمفتوحة. لا تنسى في التجميع، تضمن أن كل جزء من إطار الترامبولين ينتمي إلى حامل صلب ومتين. لا تنسى أبداً إجراء تلك التفاصيل، قد تسبب الخطأ في التسلق أو التصادم. لتجنب التصادم، يرجى التأكد من عدم تأثير المدرب على المدرب. لا تنسى إغلاق كل حزام ملتحم قبل استخدامه. تأكد من إغلاق كل حزام ملتحم داخل المدرب وخارج المدرب. تأكد من إغلاق كل حزام ملتحم داخل المدرب قبل إدخال المدرب في المصادر. 1-3 سنوات، صنع في الصين.

**Fr ATTENTION** Surveillance d'un adulte nécessaire. Gardez à l'esprit que les bébés et les jeunes enfants n'ont pas la notion de ce qui est dangereux ou potentiellement nocif. Par conséquent, il est très important de les surveiller. **MISE EN GARDE.** Montage par un adulte requis. ATTENTION. Pour usage domestique uniquement. Poids max. 25 kg. **IMPORTANT!** Le montage et le démontage de ce produit doivent toujours être effectués par un adulte. Toujours placer sur une surface plate, libre de tout obstacle et pierre pointue. **IMPORTANT.** Lire les instructions en intégralité avant de commencer le montage. Utiliser sur une surface plane et ouverte, à une distance d'au moins 2 mètres de tout obstacle et mobilier. Inspecter régulièrement le produit pour détecter tout signe d'usure. Cesser l'utilisation si toute partie du cadre en acier se casse ou est tordue. Vérifiez que les boulons et les écrous sont bien serrés à chaque début de saison et à intervalles réguliers. Si de telles vérifications ne sont pas effectuées, le joueur pourrait basculer et entraîner une chute. **ATTENTION.** Pour usage domestique familial uniquement. Peut être utilisé à l'intérieur ou à l'extérieur. Un utilisateur professionnel. Risque de collision. Enlever tout l'emballage avant de donner à votre enfant. L'article à l'intérieur de cet emballage peut être légèrement différent de la photographie. Les couleurs et les spécifications peuvent varier. Veuillez conserver ces informations pour référence future. 1-3 ans. Fabriqué en Chine.

**De ACHTUNG** Erfordert die Aufsicht einer erwachsenen Person. Denken Sie daran, dass sich Säuglinge und Kleinkinder keiner potentiellen oder tatsächlichen Gefahren bewusst sind, und Ihre Aufsicht darf sehr wichtig ist. **ACHTUNG:** Montage muss von einer erwachsenen Person durchgeführt werden. **ACHTUNG:** Nur für privaten Gebrauch. Maximalgewicht 25 kg. **WICHTIG!** Aufstellung und Abbau dieses Produkts sollte stets von einer erwachsenen Person durchgeführt werden. Achtung: Stets auf einen abgeräumten flachen Untergrund, von scharfen Objekten und Steinen entfernt, platzieren. **WICHTIG:** Bitte lesen Sie die Anleitung vor Beginn der Montage vollständig durch. In einem offenen, ebenen Bereich und in mindestens 2 m Abstand zu Hindernissen und Möbeln verwendetes Produkt regelmäßig auf Verschleiß prüfen. Produkt nicht weiter verwenden, wenn ein Teil des Stahlrahmens verbogen oder gebrochen ist. Muttern und Schrauben müssen zu Beginn jeder Saison und in regelmäßigen Abständen auf Festigkeit geprüft werden. Wenn die Tests nicht durchgeführt werden, könnte das Spielgerät umkippen und einen Sturz verursachen. **ACHTUNG:** Nur für den familiären Hausegebrauch. Geeignet für die Verwendung im Innen- und Außenbereich. Nur ein Benutzer. Kollisionsgefahr. Entfernen Sie alles. Verpackungsmaterial, bevor Sie das Produkt Ihrem Kind weitergeben. Das verpackte Produkt kann sich von der Abbildung leicht unterscheiden. Farben und Spezifikationen können variieren. Bitte bewahren Sie diese Informationen zur späteren Verwendung auf. 1-3 Jahre. Hergestellt in China.

**Zh 警告** 需要成年人的监督。请记住，婴儿和幼童不知道什么是危险或潜在危害。因此，监督是非常重要的。注意！需要成年人组装。警告！仅限家庭使用。最大重量 25 公斤。重要！一定要由成年人对本产品进行组装和拆卸。始终放在无障碍的平坦表面上，远离尖锐物体和石头。重要：开始组装前请完整阅读说明手册。必须在任何障碍物和家具至少 2 米以外的区域使用该产品。定期检查产品是否有磨损。如果框架的任何部分出现弯曲或损坏现象，请勿继续使用。每个季节之初都应检查螺栓和螺栓的紧固性，平时也须定期检查。如果未能进行此类检查，玩具可能会翻倒并导致跌落。警告：仅适合家庭使用。适用于室内或室外使用。只限一人使用。有碰撞危险。给儿童之前，请拆除所有的包装。包装内的物品与图片可能略有不同。颜色及规格可能会有所不同。请保留此信息以供将来参考。1-3岁。中国制造。

\*